



Quick Guide G4 DIGITAL VOICE PAGER

Dear Customer:
Thank you for purchasing the G4 DIGITAL VOICE PAGER.
Please read the Quick Guide before operating the
G4 DIGITAL VOICE PAGER.

1. PAGER OVERVIEW

a. Pager Appearance

Front View



Side View



Rear View



Top View



Standard Accessories

Belt Clip



USB Cable



Lithium Ion
Battery Pack


NO.	Description
1	LED Indicator
2	Navigation Key
3	Soft Key (K1~K4)
4	Back Key (F2)
5	Home Key (F1)
6	Speaker
7	Microphone
8	Receive Antenna
9	Channel Knob
10	Play Key
11	Power on/off & Volume Knob
12	Reset Key
13	Function Status on/off Key (S1)
14	Micro USB Port
15	Belt Clip
16	Battery Cover

2. OPERATION INTRODUCTION

a. Initial Use

Install Battery

- 1 Turn the screws and remove the battery cover.
- 2 Insert the battery pack into G4.
- 3 Replace the battery cover and and tighten the screws.

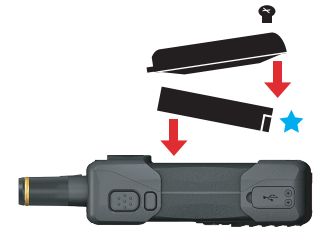

The edge by the ★ mark goes down.

Battery Charging

G4 has its own customized Lithium Ion battery, it can be charged by micro USB cable.



Power On

After the battery installed , turn the volume knob clockwise to turn on G4. You will hear “click” sound and see the word of “Loading” on the display.



b. LED Introduction



Power LED (Mono Red LED)

NO.	Entity Key	Description
1	Solid Red	• Booting / USB connected / USB Charging
2	Blinking Red	• Low Battery
3	Steady Green	• Full Charged


Receive/Unread LED (Tri-Color LED)

NO.	Entity Key	Description
1	Solid Green	• Receiving voice or data calls
2	Solid Red:	• Abnormal G4 conditions detected
3	Blinking Green	• Unread message
4	Blinking Red	• Abnormal radio system conditions detected (including Out Of Range/Site Trunking)

GSM/Bluetooth LED (Tri-Color LED)


NO.	Entity Key	Description
1	Solid Green	• Bluetooth standby
2	Solid Orange	• GSM standby
3	Solid Red	• Bluetooth or GSM connection fault
4	Blinking Green	• Bluetooth device is connected
5	Blinking Orange	• GSM system connected

c. LCD Display

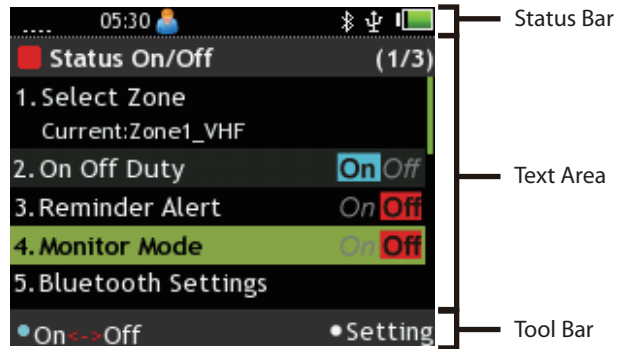


Standby Screen

1. On the standby screen, G4 displays information on the current receiving mode.

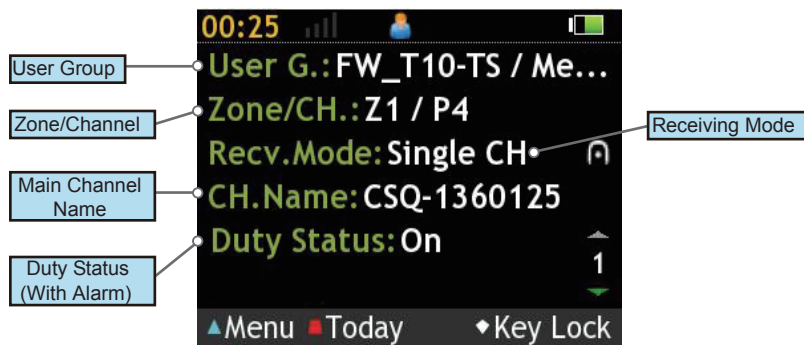

2. In Standby Mode, press the “K1” soft key to the Main Menu.

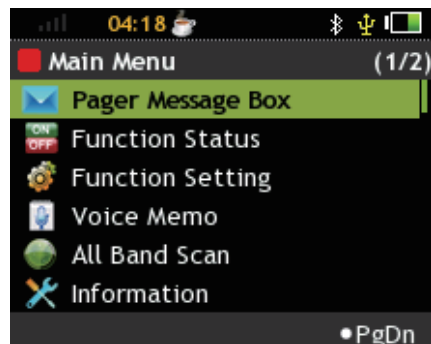

3. Press the “Home” key to go back to Standby Mode.

d. Icon Introduction

Status Bar Icon

NO.	Item	Icon	Description
1	RF Strength		RF signal strength.
2	Out of Range		Signal is out of range.
3	Message Hint		Unread message icon indication.
4	Time Display		Time display (24 hour clock).
5	Off Duty Status		Off duty status.
6	On Duty Status		On duty status.
7	Bluetooth		Bluetooth is activated.
8	Bluetooth Headset		Bluetooth earphone is connected.
9	USB cable		USB cable is connected.
10	Trunking Status		Trunking registered.
			Trunking scanning.
11	Clock Alarm		Clock alarm is activated.
12	Battery Status		The battery gauge indicator is located on the status bar and keeps you informed of the battery energy level. The five indicators are: 100%, 75%, 50%, less 0% (flashing battery icon).

For more detailed, please refer to your G4 user's manual.

WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS WITHOUT PRIOR NOTICE.



Unication

©2015 Unication Co., Ltd.
The information contained in this document is the exclusive property of Unication Co., Ltd. It shall not be disclosed, distributed or reproduced in whole or in part without written permission of Unication Co., Ltd.

Head Office
Unication Co., Ltd.
Tel.: +886-2-2299-9678
Address: 5F., No.6, Wu-Kung 5 Rd., Hsinchuang District, New Taipei City, Taiwan
Email: salesenquiry@uni.com.tw

North America Branch Office
Unication USA Inc.
Tel.: +1-817-303-9320
Address: 1901 E. Lamar Blvd., Arlington, TX 76006, U.S.A.
Email: sales@uniconation.com